

# **HP LJ3SI/4SI MAINTENANCE KIT INSTRUCTIONS**

## **\*\*\*\*\* WARNING \*\*\*\*\***

**Turn the printer off, unplug it. And allow it to sit for 30 minutes before performing user maintenance procedures**

The following parts are included in this maintenance kit

1	RG5-0046	Fusing Assembly
1	RG5-0141	Transfer Roller
6	RF5-0041	Separation/Feed Rollers
1	RB1-0818	Transfer Roller Clip
1	RF5-0081	Duplex Roller
1	Glove	Latex

### **Fuser Installation**

- 1 The fixing Assembly is located at the rear of the unit, just below the toner cartridge
- 2 Remove both paper trays then open the top cover using the release button and remove the toner cartridge
- 3 On each corner of the fixing unit are screw/posts that must be removed (4 Total)
- 4 Slide the fixing assembly to the left, and then up
- 5 Remove from the printer and exchange it with the remanufactured unit included with the kit
- 6 Install the new unit as you removed the old unit \*Be careful when sliding the unit to the right that the connector is firmly inserted into the socket on the right side of the printer
- 7 Also check that the paper sensor flag moves freely back and forth to ensure that it has not been dislodged from its seat during installation.
- 8 Replace the four screws, toner cartridge and close the top cover

### **Transfer Roller Replacement**

- 1 Please perform this procedure using the latex glove included in the kit
- 2 Both printer trays should still be removed from the unit
- 3 Open the top cover and remove the light blue plastic clip from the right side of the transfer roller and discard the clip
- 4 Hold the transfer roller in place and separate the black bushing to the right, then remove and discard the roller
- 5 With caution, Install the new transfer roller by inserting the left end into the left socket
- 6 Push the right side bushing to the right when inserting the right end of the roller into the right end socket
- 7 Install the new light blue clip included with the kit.
- 8 Check the roller installation by rotating it back and forth
- 9 Verify that the gear on the left is also moving with the roller and then you can close the top cover of the printer

### **Pickup Roller Replacement**

- 1 The paper trays should still be removed from the printer due to the pick up rollers that are located in the tray bays
- 2 Three rollers in the top tray bay and three rollers in the bottom tray bay
- 3 Replace the rollers by pinching the light blue retaining clips and sliding the gears off the shaft
- 4 Discard the old rollers and replace with the new rollers included in the kit

### **Duplex Roller Replacement**

- 1 The paper trays should still be removed from the printer
- 2 The duplex roller is located through the lower tray bay
- 3 Lift the plate and roller off the bottom of the printer and slide the roller off to the right and discard
- 4 Replace the new roller included in the kit
- 5 You should feel it snap in place after aligning the slots on the roller with the posts on the shaft
- 6 You may now install both paper trays

### **Resetting the Maintenance Counter**

- 1 Hold down the Item- and Value- keys
- 2 Turn printer on
- 3 Wait until *reset maintenance count* displays and then release both keys