

HP 9000 MAINTENANCE KIT INSTRUCTIONS

***** WARNING *****

Turn the printer off, unplug it. And allow it to sit for 30 minutes before performing user maintenance procedures

The following parts are included in this maintenance kit

1	RG5-5750	Fusing Assembly
1	RG5-5662	Transfer Roller
7	RF5-3338	Feed/Separation Rollers
2	RF5-3340	Pickup Rollers
1	Glove	Latex

Fusing Assembly Replacement

1. If a paper-handling output accessory is installed, reposition it so that the left door of the printer is fully accessible and open the left door.
2. If a duplex printing accessory is installed, remove it by pushing downward on the green tab and sliding the accessory out.
3. Locate the small blue levers on each side of the fuser and rotate toward the center of the fuser.
4. Lift up on the finger handles and lift up slightly to remove the fuser.
5. Grasp the blue handle on the top of the fuser assembly with one hand and tilt the fuser downward slightly to remove it from the printer.
6. Remove packing from new fuser and align the fuser with the bars on each side of the opening.
7. Lift up slightly and slide the fuser firmly into the printer.
8. Once the fuser is in place rotate the blue levers up to lock the fuser assembly in place.
9. Avoid move the blue, T-shaped envelope levers inside the printer. If the envelope levers are moved to the top position, toner may not adhere correctly to the paper when you resume printing.
10. Reinstall the duplex printing accessory if it was removed.
11. Close the left door and reconnect the power cord.

Transfer roller Replacement

- 1 Press the power button to turn the power off.
- 2 Open the front door of the printer and rotate the large green lever downward.
- 3 Pinch the blue tab on the Transfer roller assembly and pull the roller out of the printer.
- 4 Remove the new transfer roller assembly from its packing
- 5 **CAUTION:** Do not touch the black foam roller. Skin oils can damage the roller.
- 6 Insert the new transfer roller assembly into the printer until it locks into place.
- 7 Press the white button on the large green lever, and rotate the lever upward until it locks into place.
- 8 Close the front door of the printer.

Pickup Roller Replacement, Tray 2 & 3

- 1 Open Tray 2 and pull it out until it stops, Then remove the tray by lifting the outer end while pull the tray free
- 2 Repeat step One for Tray 3.
- 3 You will gain access to the rollers through the empty paper tray slots. (3 rollers per tray)
- 4 Pinch the tab on the end of each roller, and then slide it off the shaft. DO NOT remove the black spacer from behind the separation roller..
- 5 Remove the rollers from the plastic bag and slide the new rollers onto each shaft until they lock into place.
- 6 Reinstall Tray 2 and 3

Pickup Roller Replacement , Tray 4 (2000-sheet Input Tray)

- 1 Open the tray and remove any paper, Paper must be removed before tray can be pulled from the printer.
- 2 Tray 4 could be damaged if it is dropped. Use both hands when removing the tray from the printer. Pull tray 4 out until it stops. Locate the blue release buttons that are on both sides of the tray, and then slide the buttons toward the front of the tray. Pull the tray away from the printer.
- 3 To gain access to the separation roller, slide the blue roller shield toward the back of tray 4
- 4 Pinch the protruding tabs and slide each roller off the shaft.
- 5 Slide the new rollers onto each shaft until they click into place.
- 6 Using BOTH hands to grasp the sides of the tray, reinstall Tray 4.

Resetting the Maintenance Counter

- 1 While pressing the $\sqrt{\quad}$ key, press the power button to turn the printer on.
- 2 When the three LED's are on, Press the \blacktriangle key, then press $\sqrt{\quad}$.